



# Predator Sport Jet 70"

## USER MANUAL

WINGSPAN:1600mm

LENGTH:1800mm



## Introduction

- Thank you for purchasing our Predator Sport Jet plane. we strive to achieve a good quality quick build ARF aircraft .

It requires the least amount of assembly of any ARF kit to obtain the maximum performance.

- Both the design and manufacturing have been undertaken to the highest standards, using best quality hardware, covering, wood & glue during factory construction stage.
- By optimal weight and balance along with reliable construction, you will find this plane ideal for flying.

We hope that every effort and service we offer will, in turn, give you confidence using PILOT Models.

- Have a wonderful time flying your aircraft in a suitable safe space!

## Warrant

- All Pilot-RC products are guaranteed against defects for 30 days of receiving your airplane. This warranty is limited to construction or production defects in both material and workmanship , it does not cover any component parts damaged through use or modification .

- The manufacture cannot supervise the assembly, operation or maintenance, and is not responsible for radio malfunctions. Please ensure your radio system is in good condition.

**We are not responsible for any accident or damage while using this product.** It is impossible to determine for certain whether crash damage was the result of improper installation of our products, a radio system failure, or pilot error. Model airplane owners use our products at their own risk.

- Pilot-RC will not be liable for any costs, unless agreed and proved beyond doubt the failure was due to faulty materials or fabrication. Any agreed cost will not exceed the cost of the airframe and not include engine, radio equipment or third party claims.
- Should you wish to return a product or receive replacement parts, all shipping cost must be paid by the customer.

## Attention

1. **Do not regard this plane as a toy!**
2. To ensure safety, please read the instruction manual thoroughly before assembly.
3. Building and operating an RC Plane of this nature requires previous experience and competence to an experienced level. This plane is not for a beginner!
4. If you are in doubt have an experienced pilot at hand. Diligent practicing and correct guidance is essential, accidents can cause bodily harm and property damage.
5. Seek assistance from an experienced person or airplane model clubs in assembly, operation and maintenance to ensure successful training.
6. **Fly only in a registered RC model club airfield** that is approved by your local Academy of Model Aeronautics (AMA).

- Pilot-RC has the right to revise the plane, the instructions and the limited warranty without notice. If you have any problems and questions please contact Pilot –RC:

Email: pilot-rc@139.com , info@pilot-rc.com

Phone:+86 760 88781293

FAX: +86 760 88780293


Address: No.34, Chengnan Er Road , Zhongshan city, 528400, Guangdong Province, China

## *Install kit contents*

### **Install kit contents:**

(Some contents like fuel tank etc... has already installed in fuselage)


#### **Aluminum tube:**

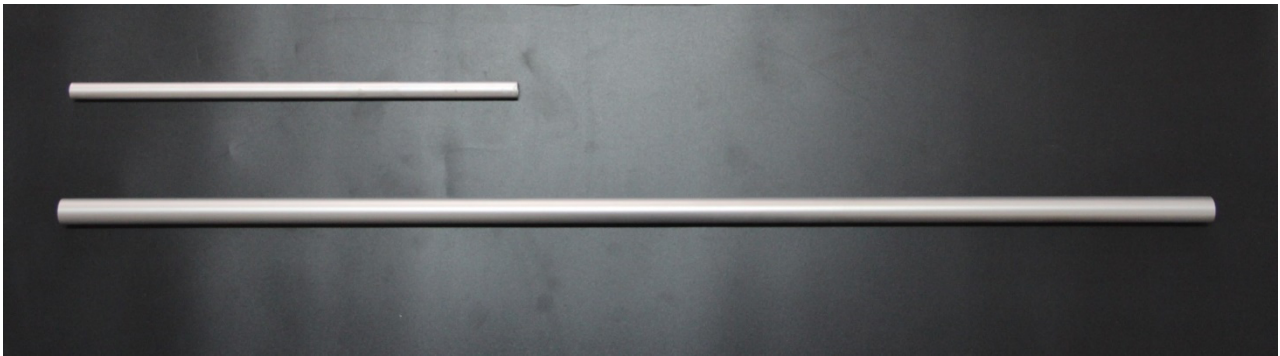

#### **Landing gear module(optional):**

Landing gear

Pilot landing gear controller

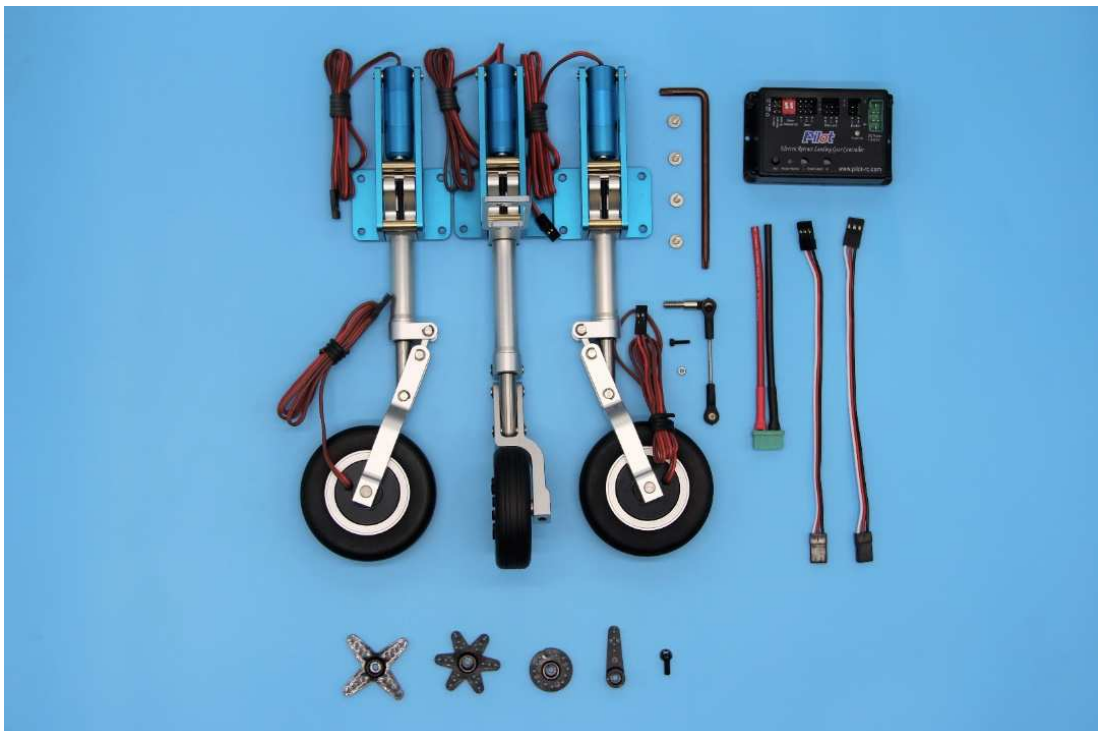

## ***Install kit contents***

### **Accessories pack:**



### **Accessories pack includes:**

Hexagon screws in metric system(SHCS)

Tapping screws

Metric Allen Wrench

Push rot wrench

V teeth steel wire

Push rot

Wring clamp

Gasket

Battery bandage

Oil nipple suit

Extension cord

Crowbar

**(Some of accessories like screw/cord etc... isn't in this accessories pack)**

## ***Install kit contents***

### **Servo module(optional):**

Servo:

PY20AH 7

PY08AH 1

Servo arm:

Pilot Futaba aluminum alloy 0.8" 3

Pilot Futaba aluminum alloy 1.2" 4



### ***Other Accessories Need To Complete:***

Epoxy Adhesives

Cyanocrylate adhesives

X-Acto and Saw knives

Sandpaper


Thread lock

Aircraft stand or support

## Landing gear assembly


Landing gear assembly:

Retract Landing Gear Installation, Predator Jet come with electric-landing gear and brakes.

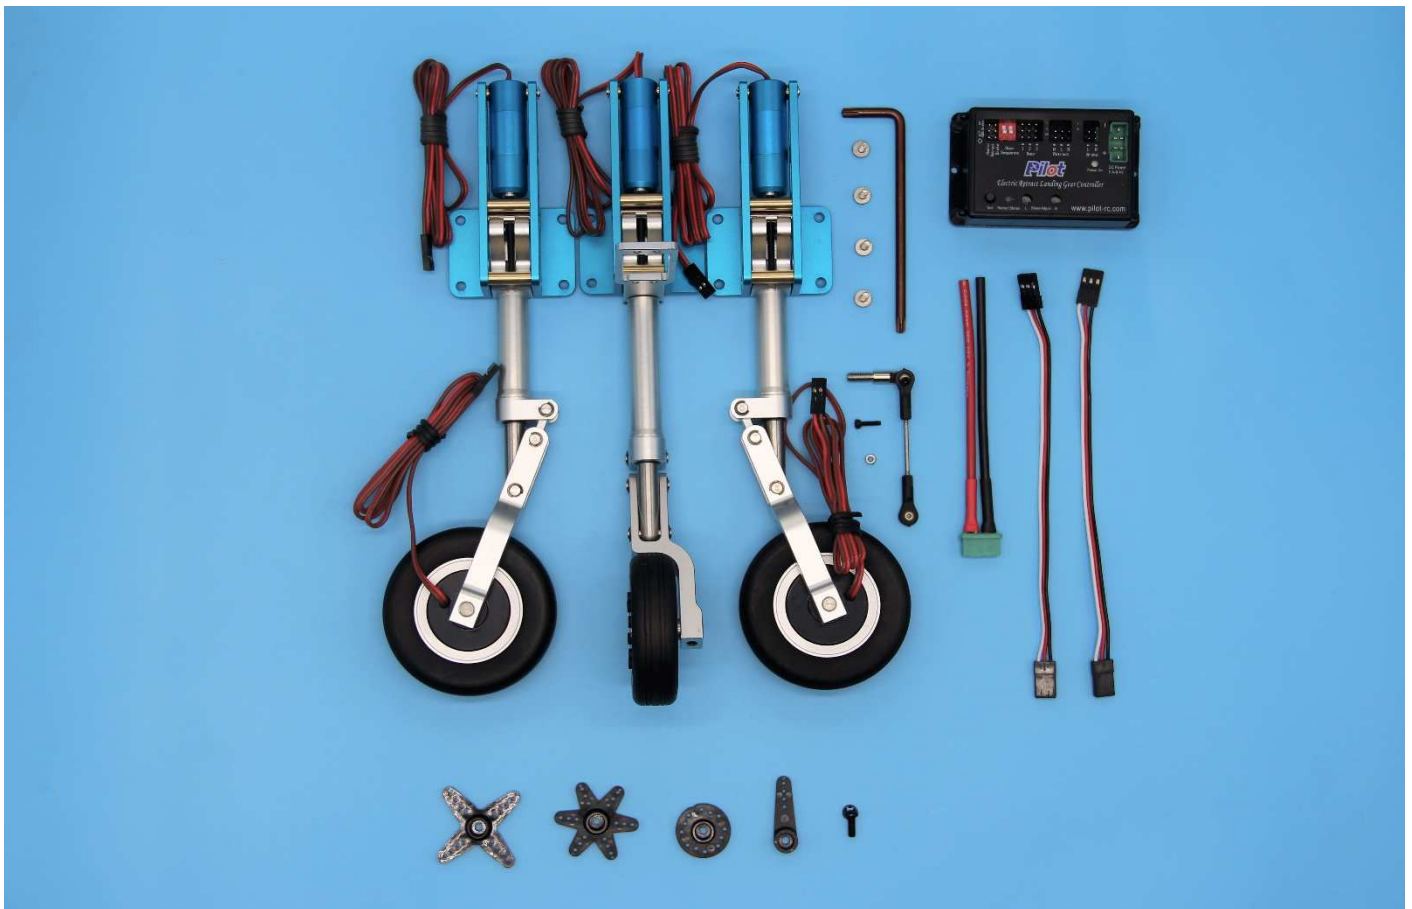


## Landing gear assembly

1: Install the servo to the nose landing gear.

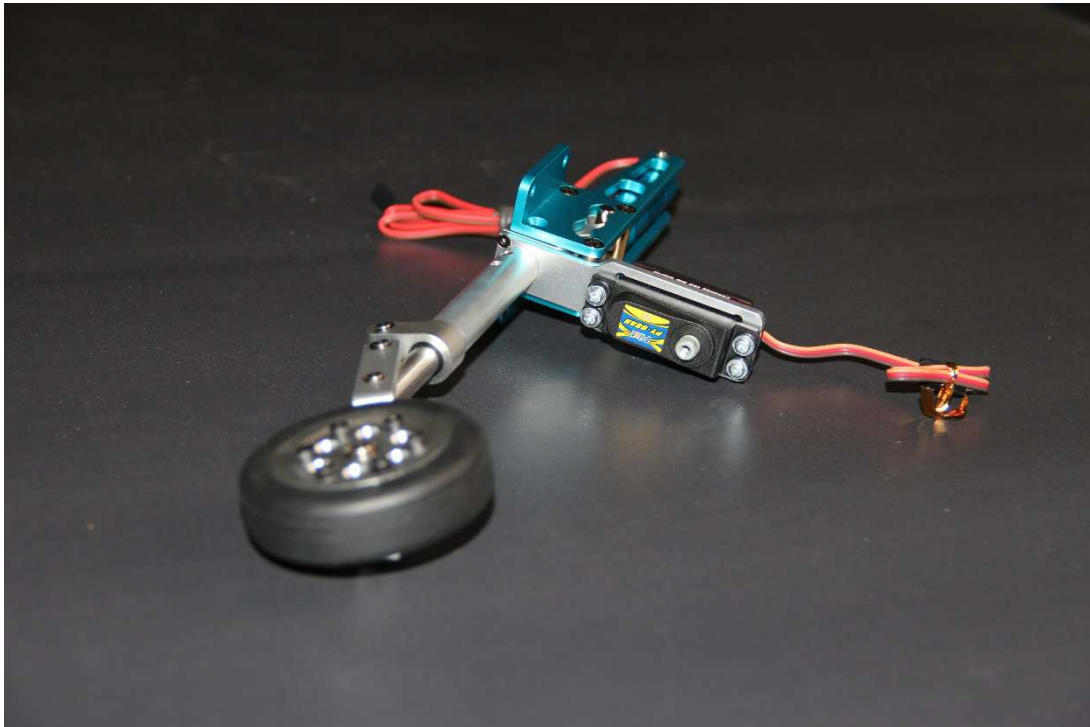


2: Install the servo arm and the push rod. Adjust it to make sure the plane can go straight approx. You still can adjust by radio after install it.

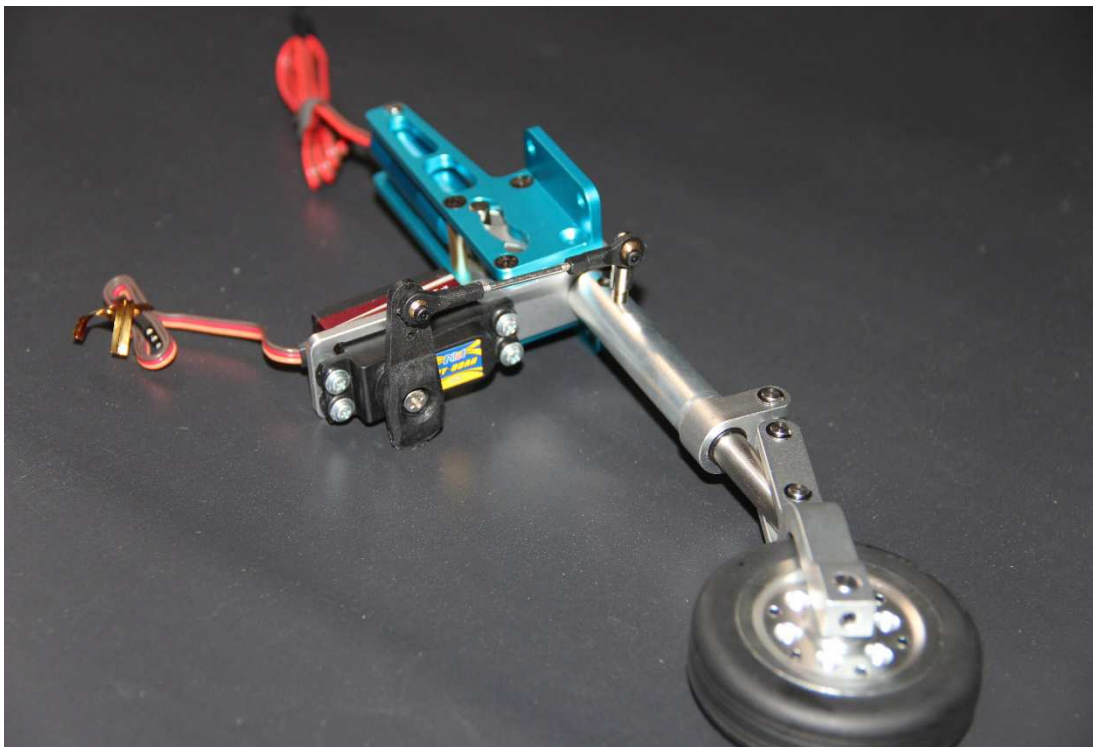

## *Landing gear assembly*

3: Place the nose gear to the mounting and adjust it to the correct position, then mark the 4 mounting screws hole.

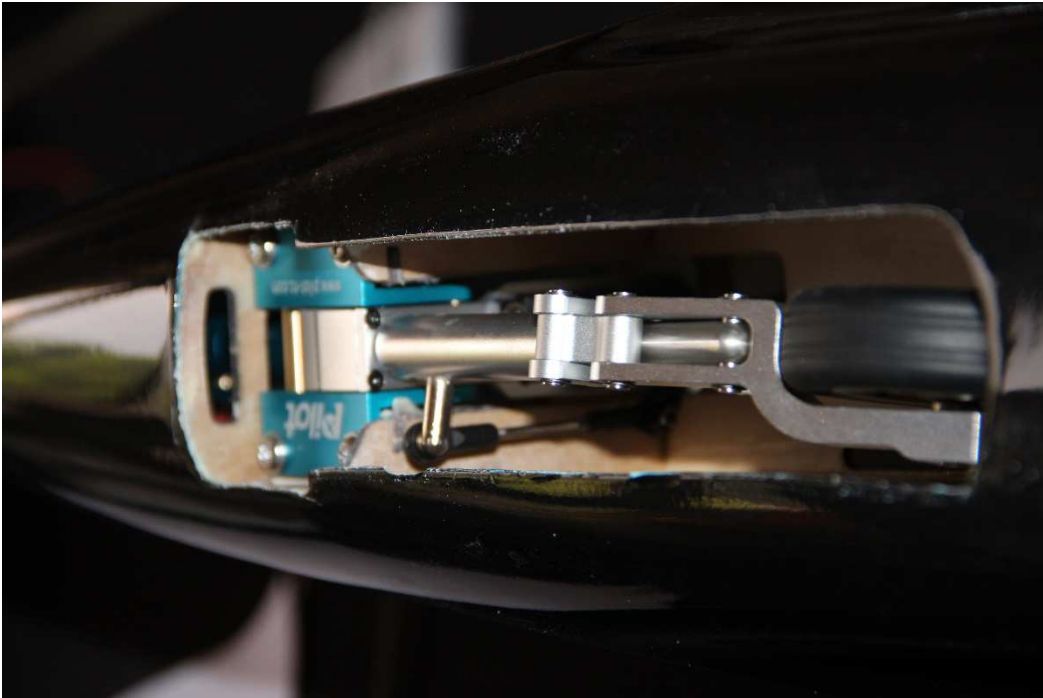


4: Before you drilling the mounting screws hole , please make sure there is nothing to get stuck when it open and close.






## Landing gear assembly - nose

After the installation

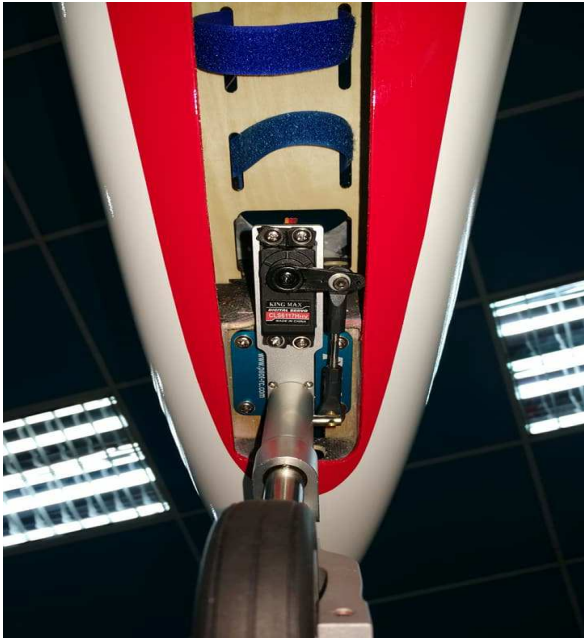

Carefully arrange the nose gear retract wire lead and the steering wire as well ...

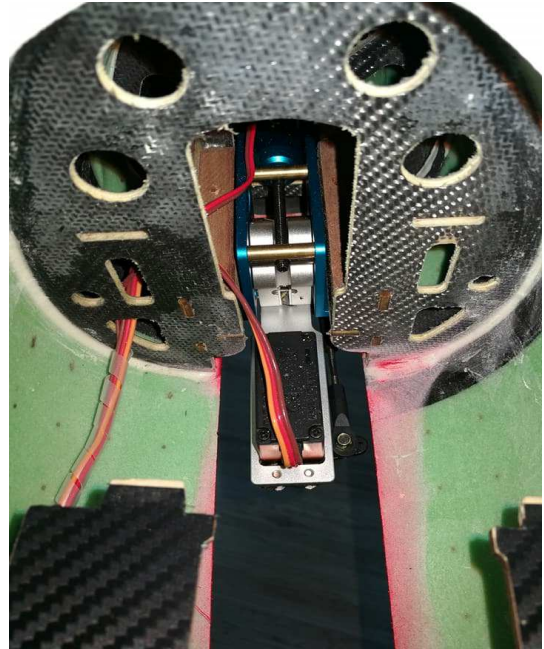

Install the nose retract gear to the fuselage.




Thanks to the "Test" function of the Pilot-Rc controller unit, you can test the correct and free working of the system without the need for your transmitter or receiver, just connect a battery direct to the controller.




## Landing gear assembly - main


Recommend to use this 4 in 1 MPX style connector from Pilot-RC. It's an optional parts.

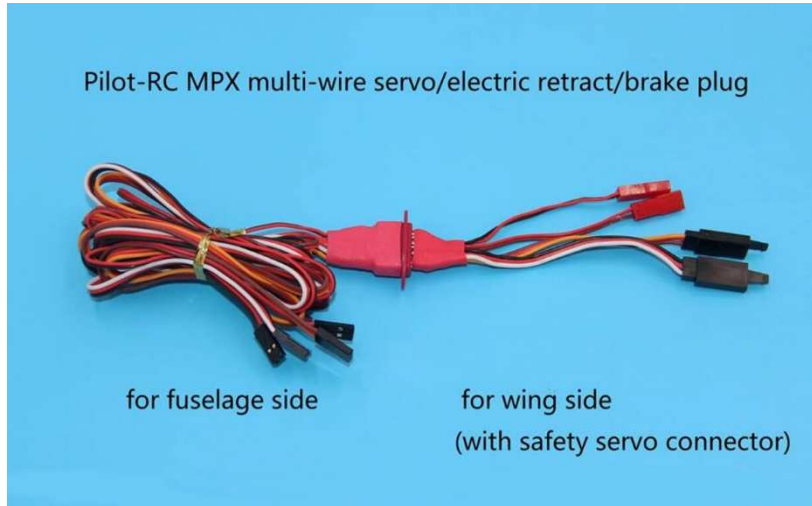

1. Connect all servo / landing gear / brakes wire.

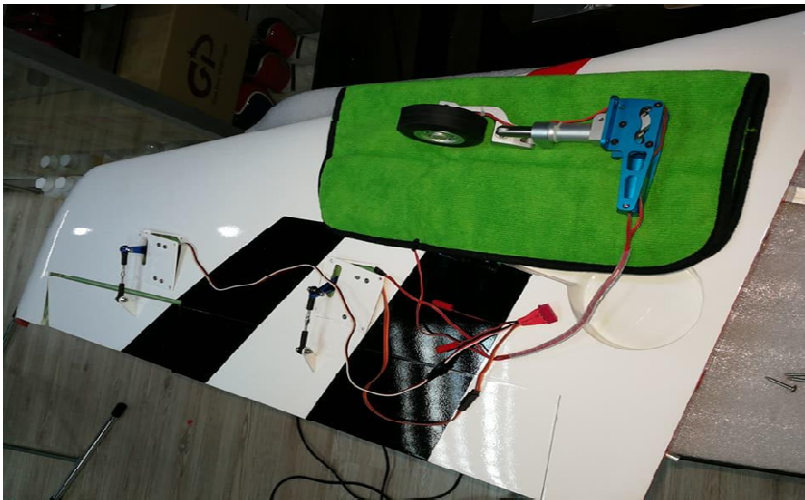

2. The multi connector 4 in 1 out from the opening hole...

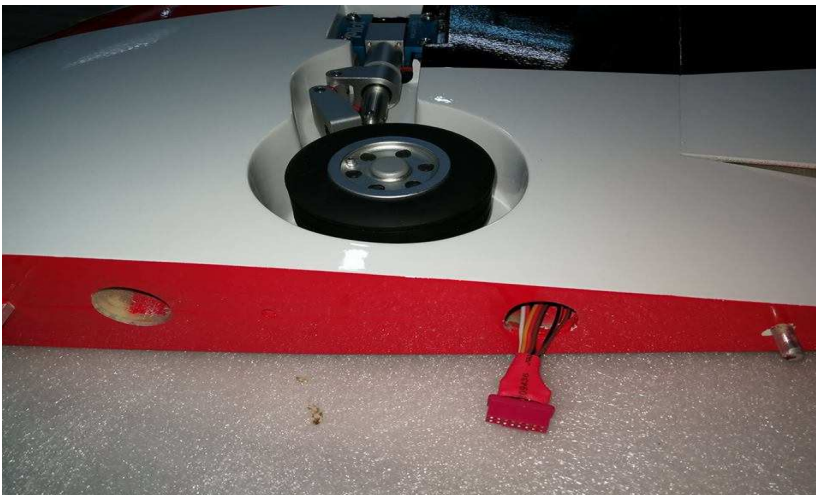

## Landing gear assembly - main

3. Double check the positioning of your gear before drilling any holes. Make sure that the gear movement is free of any obstacles.




4. Remove the gear and carefully drill the holes to accept your chosen screws. We recommend the use of bolts and blind nuts, however wood screws can also be used as a "failure point" in case of a hard landing.




## Wing Servo/Flaps Assembly


The control horns are pre-installed at the factory, ready for use.

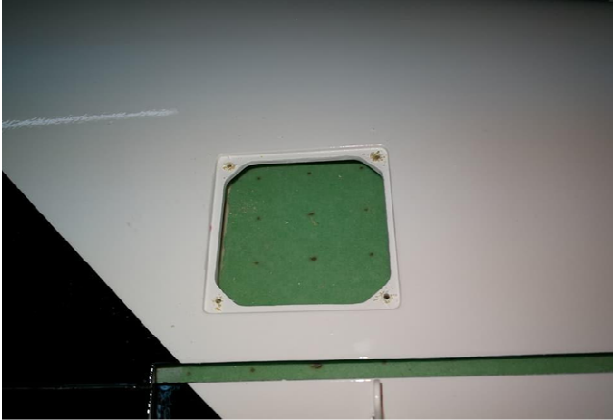

1. Screw the servo to the servo plate then install the servo arm on to the servo, making sure that this is centred

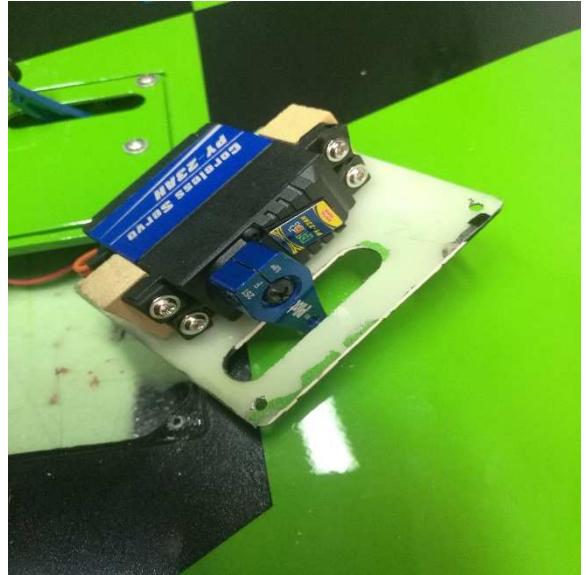

2. Place the servo over the servo plate making sure that the arm moves freely within the provided slot, and mark out the placement of the four screw holes


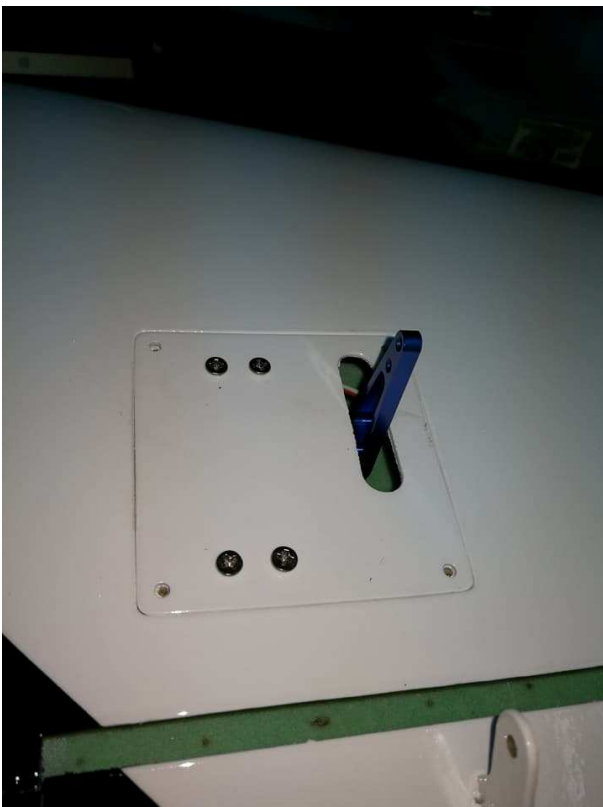


3. Drill out the four holes in the plate, then securely screw the servo to the inside of the plate using the metal screws provided




## Wing Servo/Flaps Assembly

4. Attach the included pushrods and ball links between the servo arm and the control horn.

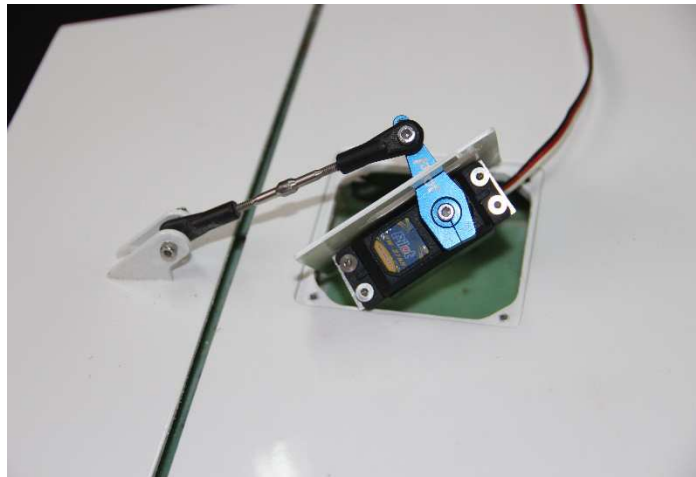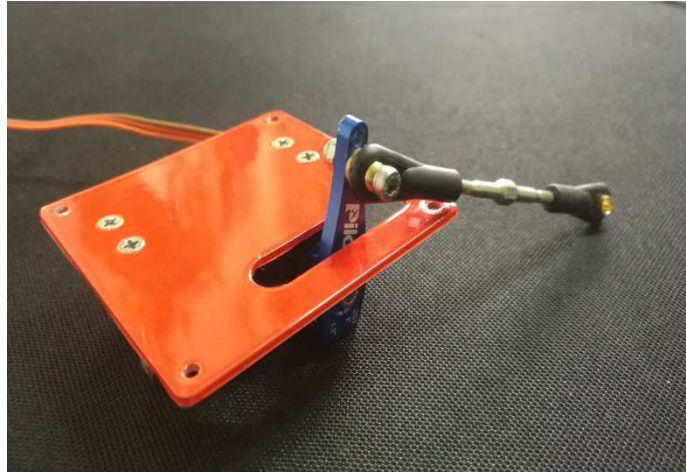


5. Route the servo wire through the inside of the wing toward the fuselage, before securely screwing the servo plate to the wing with four wood screws

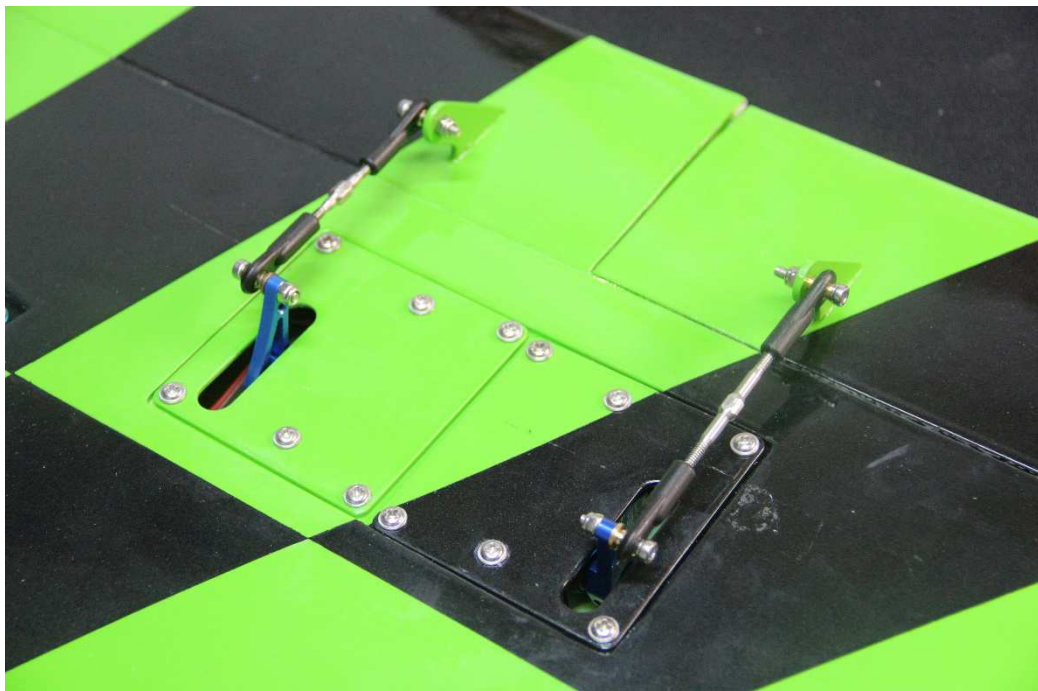

## Wing Servo/Flaps Assembly

Aileron servo / Flaps servo / Gear installed

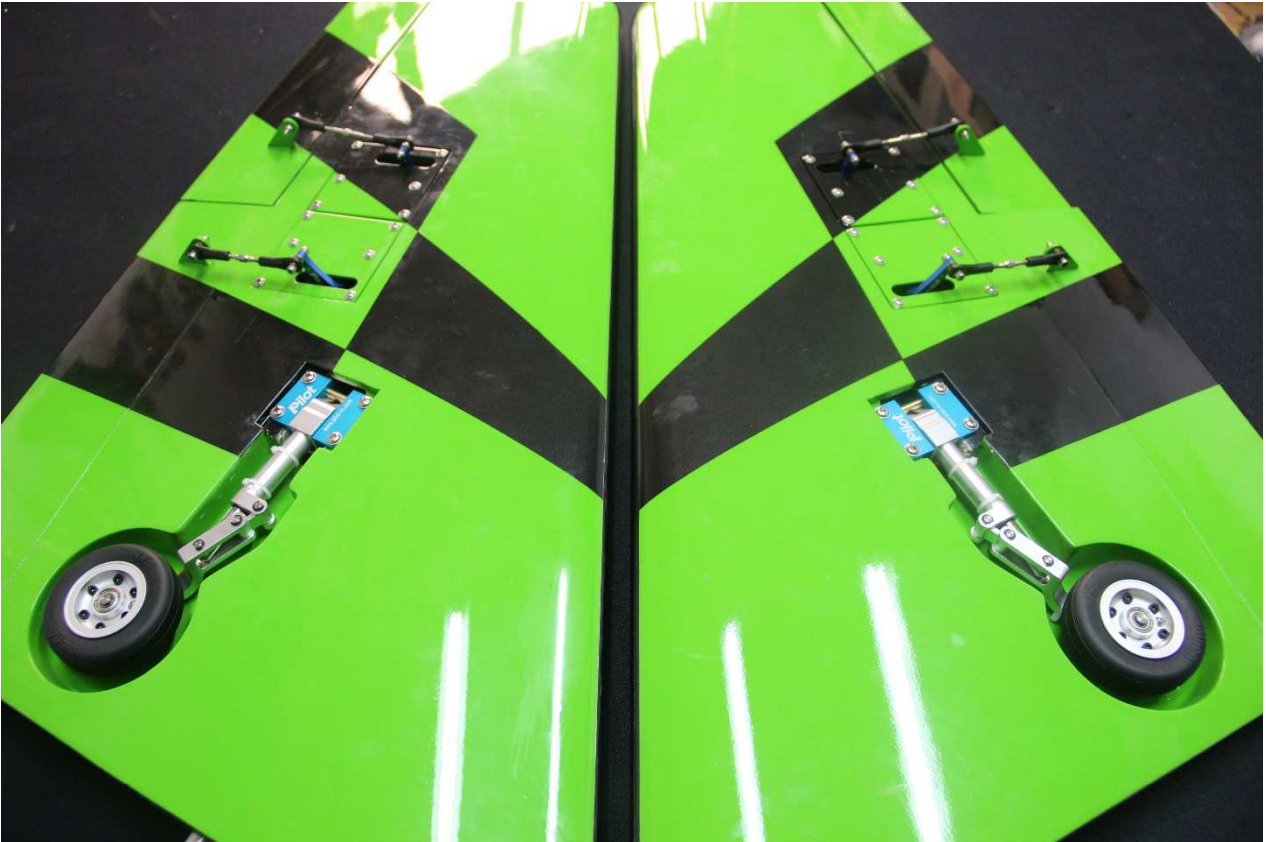

6. Use a thin ply as a back plate and installed the 4 in 1 connector, use 5 min epoxy to glue it from inside of the fuselage.

7. Just one connector for aileron/flaps/landing gear/brakes.

One side of the connector can be screwed to the fuselage, while the other is left inside the wing, loose, for easy connections.





## Elevator/ Rudder Servo Assembly

Rudder servo assembly



1. Insert the servo into the precut servo mount

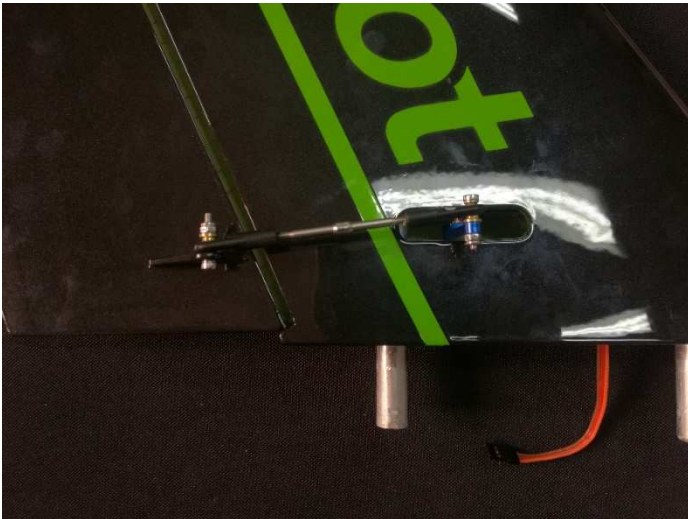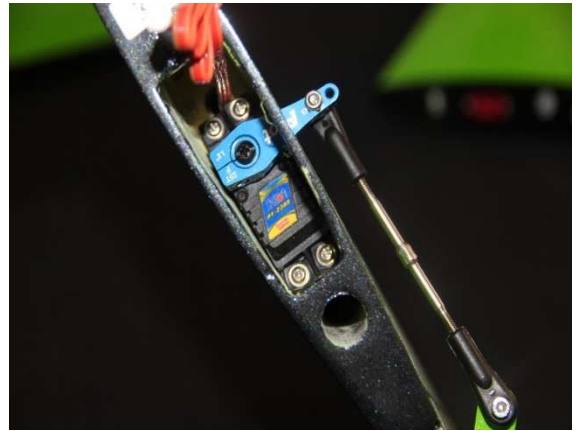

2. Screw the servo in place, and then install the servo arm on to the servo, making sure that this is centred.




## Elevator/ Rudder Servo Assembly

Next is the elevators



1. Put in the servo to the precut slot in the elevator.

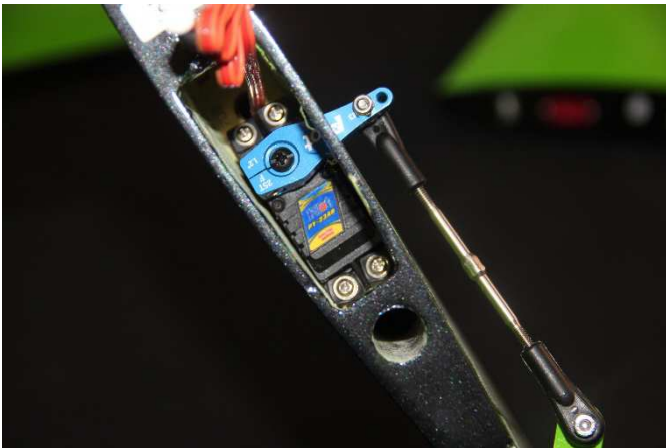

2. Screw the servo in place, and then install the servo arm on to the servo, making sure that this is centred.



3: The other side of the servo connector glue at the side of the fuselage, just a drop of CA or 5 min epoxy to glue it. After that, use bolt to screw the elevators



## Servo Wire Arrangements

1. You will find a top tube in the top section of the fuselage! Servo wire will slide in from the plastic tube all the way out from the tube.





2. You can use a fire proof tubing to keep the wire all isolate from heat.




3. To keep all the wire away from the engine heat best...

## Tank Arrangement


The 70" predator use PilotRC 2000ml oil tank.

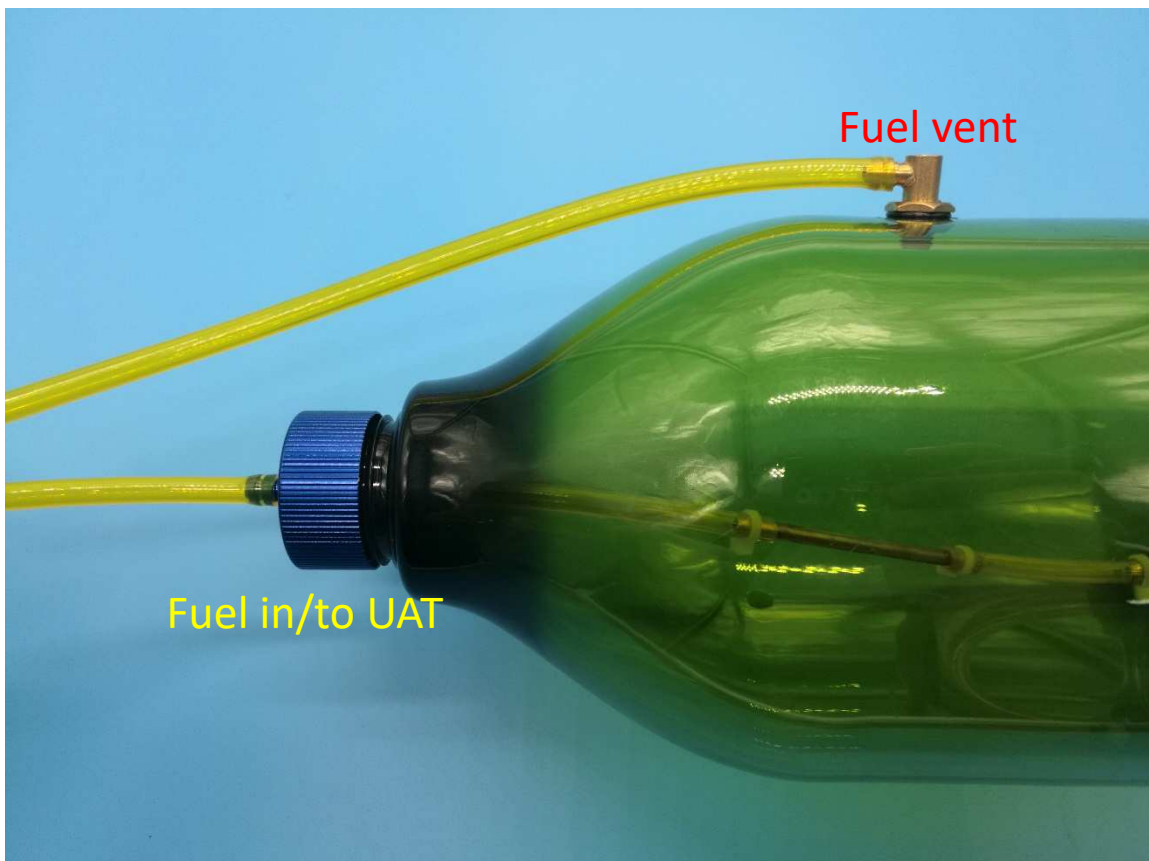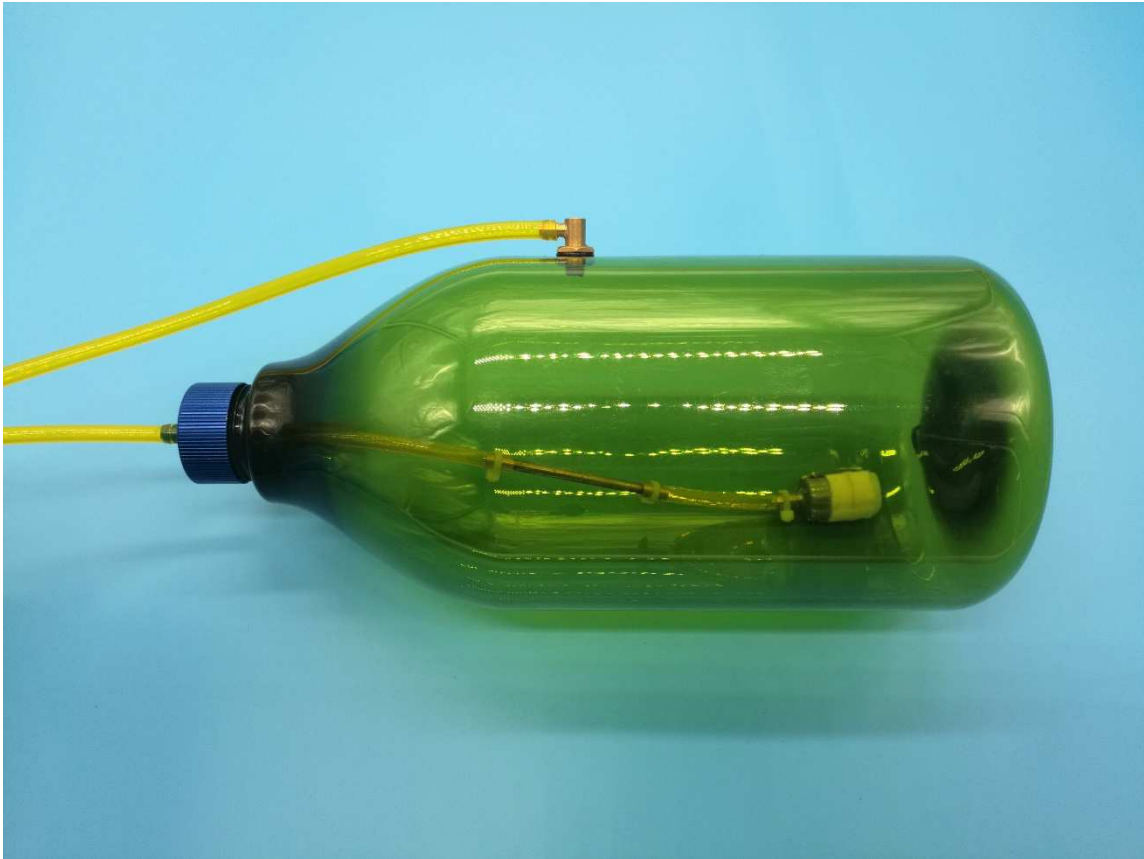


## Fuel Tank Installation

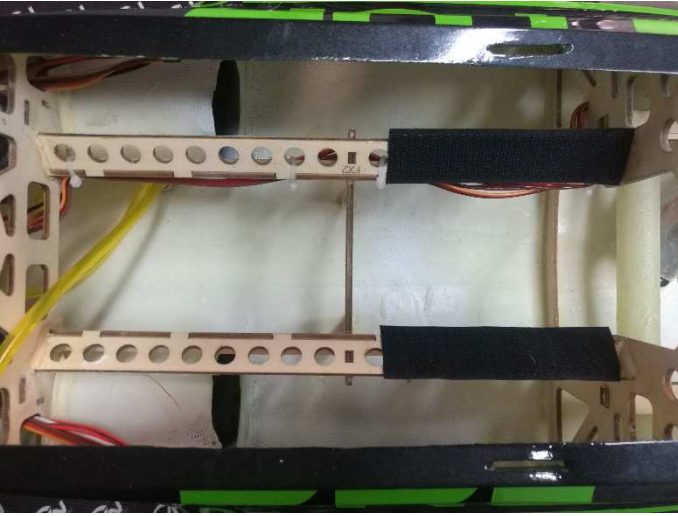



To arrange the fuel tank, connect all the oil tube(or you can connect it later), and stick the Velcro stick on the tank support frame. Also, you need stick the Velcro stick on the fuel tank, to arrange the tank on the support frame, use Velcro stick tape to straining the tank.

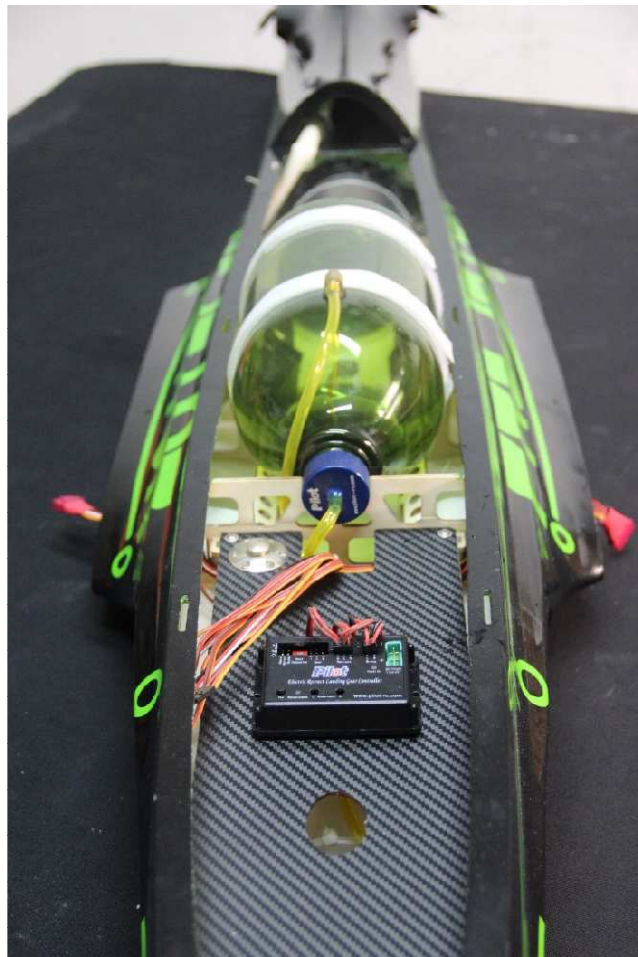


## Fuel Tank Installation

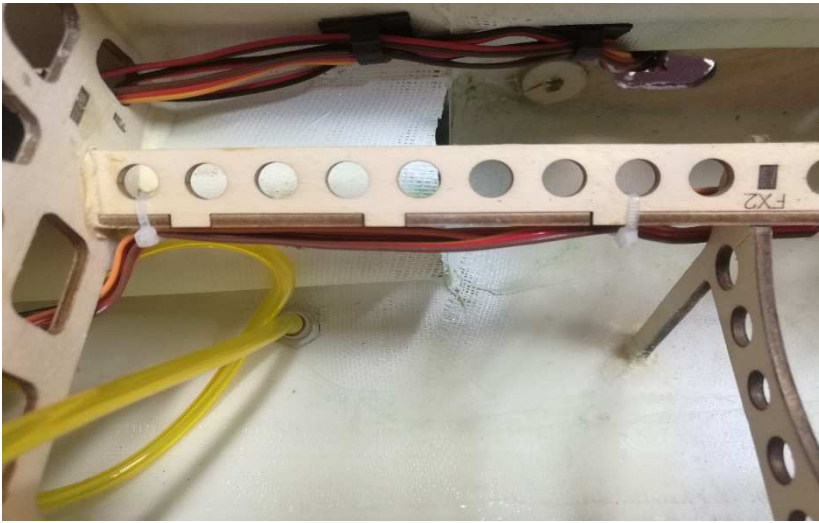

The over flow vent installation. You can connect a taxi tank if you wish to.

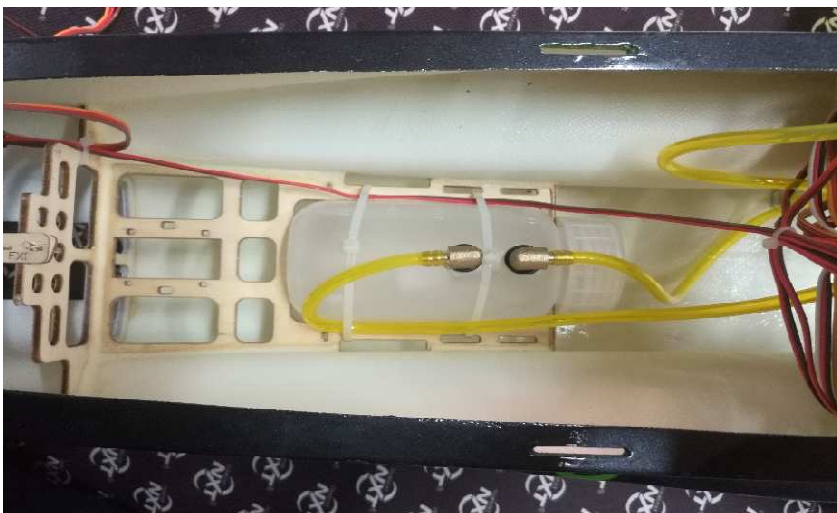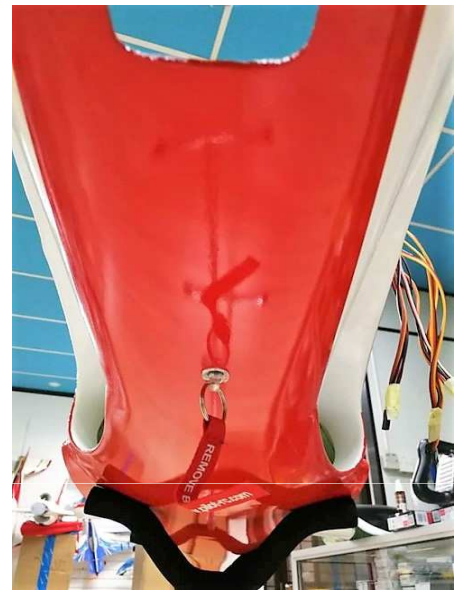

UAT installation position

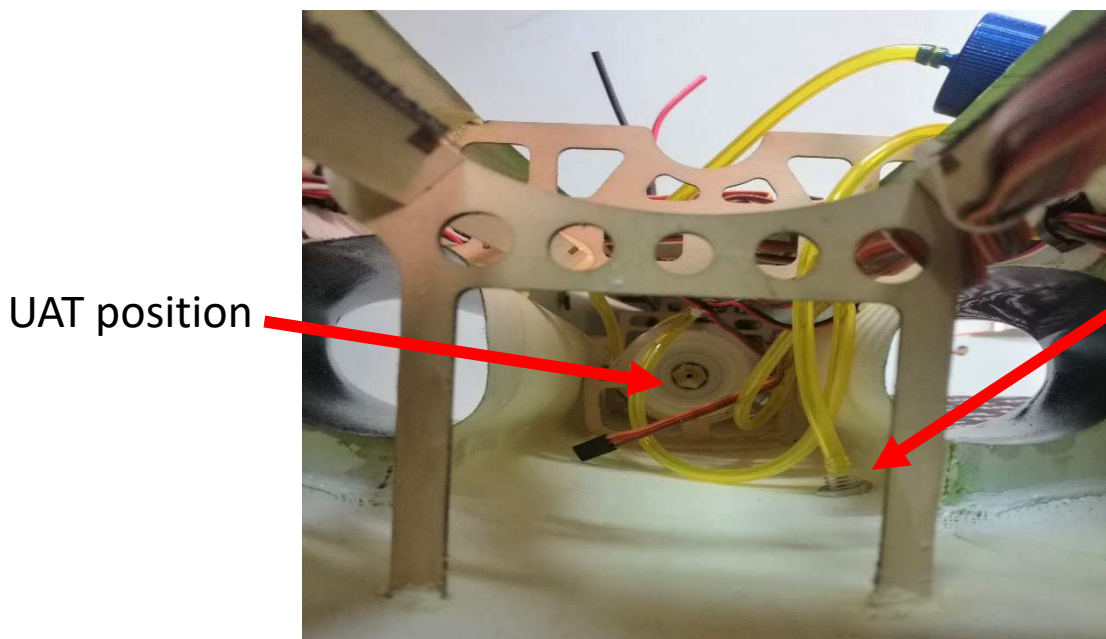

UAT position

Over flow vent position

## Battery Installation


Battery install placement. On top of the nose gear.



## Checking CG

The predator jet comes with CG measuring tools , very handy to check CG

Please keep no fuel to check the CG.  
Click here for the video:  
<https://www.facebook.com/khaitang.wong/videos/1875569852454736/>

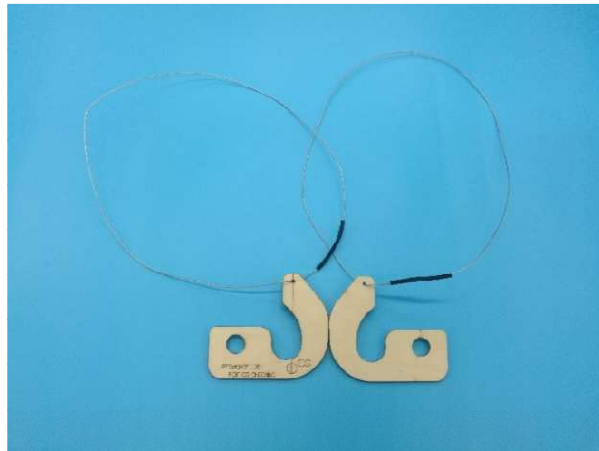

## Flying Setting

**Aileron:** 17mm

**Rudder:** 25mm

**Elevator:** 13mm

### **Flaps:**

46mm for **take off**

78mm for **landing**.

**CG:** The CG is 275-283mm from the front leading edge on the root of the wing.

## ***Flight Preparation***

- Make sure you have the right model programmed into your transmitter
- Check the direction of each surface not and also right before you take off .
- Remember nothing wrong on the ground ever improves in the air
- Check the air plane with the engine running and do a range check with your body between you and the plane at least 150 feet.
- Check your battery voltage after each flight, in case one servo is draining your battery
- Recheck all screws ,horns and linkages for slop after your maiden flight and check for damage if you made a bad landing you first time
- Have an experienced pilot fly it for you the first time if you have any doubts in your mind about the maiden flight
- Take a break after you first flight and let the adrenaline burned off by bragging to your fellow members how good it flies
- Fly low and at a medium speed on your first few flight
- Listen to your engine run and have an observer with you to remember what you talked about during the flight or if you get into trouble . Always balance your props, vibration is a killer.
- Remember nose heavy airplanes fly all the time, tail heavy airplanes fly only once. Be on the CG!
- Flying two mistakes: high in the beginning and not close to people, planes or runways. Being a center of the runway hog does not endear you to many modelers.

## ***Double Check***

Double check that all screws are installed, all components tightly secured, batteries and or fuel tank are full, all surfaces are working in the correct directions, balance is correct and range test passed before performing your maiden flight.

**WE WISH YOU A SUCCESSFUL MAIDEN AND MANY HAPPY FLIGHTS WITH YOUR  
NEW MODEL**

Tony Tan, Pilot-RC





## **Zhongshan Pilot Model Aircraft Product Ltd**

Address: No.34, Chengnan Er Road, Zhongshan city, 528455,  
Guangdong Province, China

Web: [www.pilot-rc.com](http://www.pilot-rc.com)

Email: [pilot-rc@139.com](mailto:pilot-rc@139.com), [info@pilot-rc.com](mailto:info@pilot-rc.com)

[Tel: +86-760-88781293](tel:+86-760-88781293) FAX: +86-760-88780293